



BESTWARE Hardware Production Co., Ltd.

Add: Block 8, No.6, Jianda Nan Road, Jiangmen, Guangdong, China

Website: www.bestware-sparkling.com

Email: business@bestware-stainless.com after-sales@bestware-stainless.com

WhatsApp: +86 18929047065 Tel: +86 750 3108801

Wechat: +86 18929047065



Website



YouTube



WhatsApp



Wechat

2026 V1.1



Commercial Water Dispenser (2 in 1) INSTRUCTION MANUAL



Applicable Models: G5DS-15、G5DS-105

ONE-STOP SOLUTION PROVIDER OF COMMERCIAL WATER DISPENSER

CATALOG

01 Instruction Manual

Dispenser Tap Operation Instructions	01
Setting Dispensing Time on Tap	02
Heating Unit Operation Instructions	03
Heating Unit Energy-saving Mode Setting	04
Usage Precautions	05
Error Codes and Troubleshooting	06

07 Installation Manual

Equipment Assembly Components Overview	07
Required Space and Placement Requirements	08
Water and Electrical Positioning Requirements	09
Countertop Cut-out Size	10
Dispenser Tap Installation Steps	10
Tubing Connection Precautions	12
Communication Cable Connection Precautions	13
Power-on Precautions	13
UV Sterilization Module Precautions	14
RO Filtration Unit Wastewater Drain Tube Precautions	15
Safety Valve Drain Hose Precautions	15
Connection Diagram	16
Post-installation Precautions	17
Pre-startup Precautions	17

18 Warranty & Disclaimer

Dispenser Tap Operation Instructions

1. Dispensing Ambient Water:

- ❶ Rotate knob to ambient water mode. ❷ Press center of the knob to start dispensing. ❸ Display dispensing countdown.




2. Dispensing Hot Water:

- ❶ Turn to "Hot Water", press to unlock. ❷ Single-press knob center within 0.8 seconds. ❸ Display dispensing countdown.



Setting Dispensing Time on the Dispenser Tap

1. On the selected mode, press and hold the center of the screen for 5 seconds to enter the time setting.
(Each mode has its own independent time setting with power-off memory. The following example uses ambient water mode.)

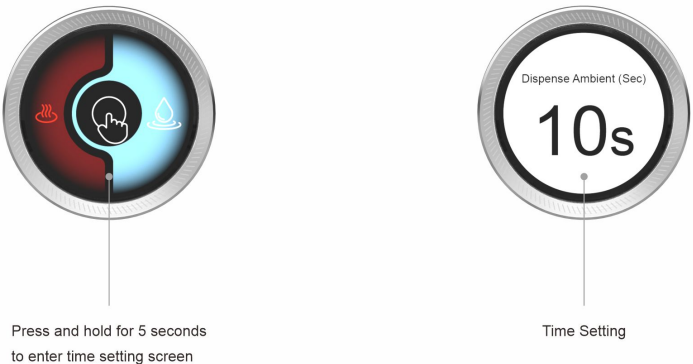


2. Rotate knob to set desired time (1-60 seconds). 3. Press the screen again to confirm.




Heating Unit Operation Instructions



1. Press "+" or "-" on the control panel to set the desired temperature (45°C-98°C).

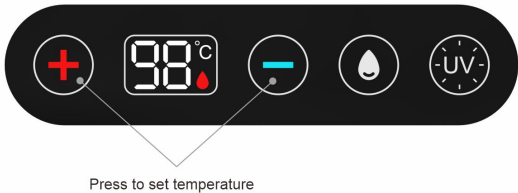


2. Indicator Status:
- Solid red drop: Heating complete
 - Flashing red drop: Heating in progress
 - Solid white drop and UV lights: Normal operation

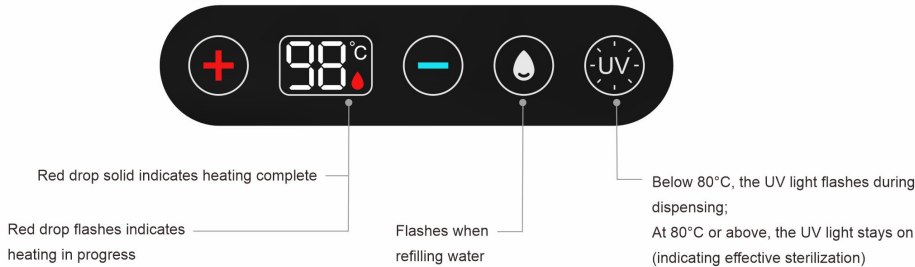

Heating Unit Energy-saving Mode Setting

1. Press and hold "+" button for 5 seconds to enter the energy-saving mode setting (default is P1).
Press "+" or "-" to switch between energy-saving modes P1, P2, and P3 (one-way switching, no cycling).

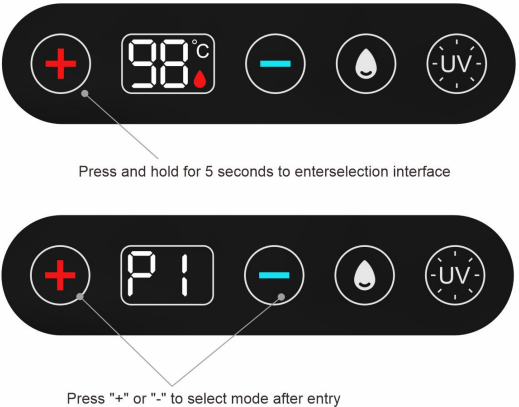

Descriptions of Energy-saving Modes

- P1-Standard Mode:**
Shuts off heating after 24 hours of inactivity. Heating restarts to the set temperature when dispensing resumes.
- P2-Insulated Mode:**
Drops to 65°C after 3 hours of no dispensing to reduce energy consumption. Shuts off after 24 hours of inactivity. Heating restarts to the set temperature when dispensing resumes.
- P3-High Efficiency Mode:**
Shuts off heating after 3 hours of inactivity. Heating restarts to the set temperature when dispensing resumes.


2. After selecting, if there is no operation within 5 seconds, it will automatically save the current setting and exit (e.g., P1). The setting is retained even after a power interruption.



Usage Precautions

1. Heating Unit Precautions:

- 1 Ensure that the electricity meter and wire gauge meet the rated current of the heating unit. Consult a qualified electrician if needed.

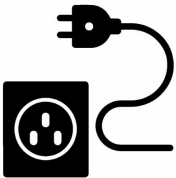

- 2 Keep the power plug dry when connecting to power. Never plug or unplug with wet hands.



- 3 After installation, verify that all wiring and tubing connections are correct before powering on.



Error Codes and Troubleshooting

Heating Unit




Error Code Display

Error Code	Error Name	Symptoms	Possible Causes	Solution	Image
E0	Water Leakage Protection	All loads shut down, water dispensing disabled (E0 has the highest priority)	Loose internal piping in heating unit causing leakage	Remove side panel to check and re-secure any loose pipes	/
			Water accumulation in leakage protector	Remove right side panel to clean accumulated water in leakage protector	
			Water tank leakage	Contact after-sales service	/
E1	Temperature Sensor Fault	Heating disabled; dispensing and other functions normal	Damaged or faulty temperature sensor	Contact after-sales service	/
E7	Heating Tank Refill Error	Heating tank not refilled within 20 minutes	No water supply to heating tank	Check if water supply is normal	/


Note: Contact after-sales service if above solutions don't resolve the issue

Equipment Assembly Components Overview

1. Dispenser Tap Assembly Components

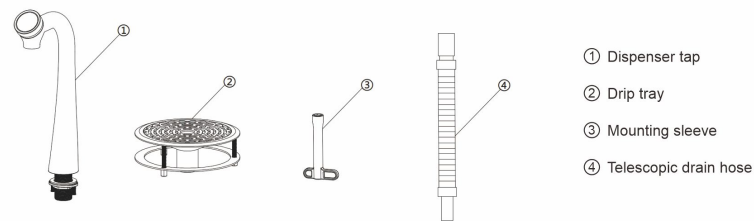


2. Heating Unit Assembly Components

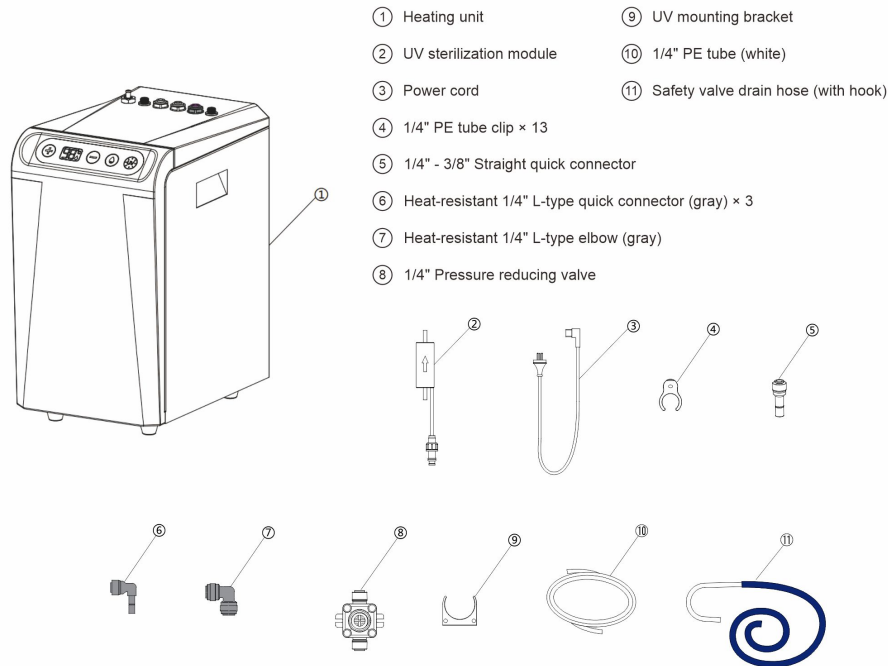


3. RO Filtration Unit Assembly Components

RO filtration unit (optional)

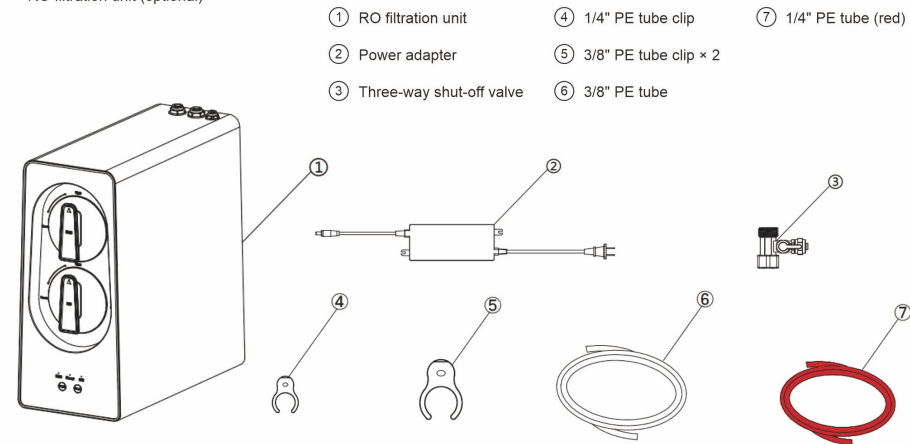

Required Space and Placement Requirements


1. Minimum Clearance for Heating Unit

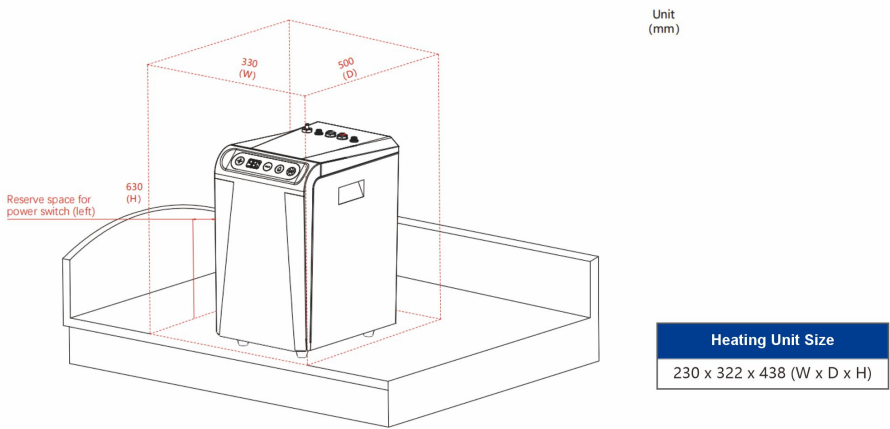

2. Minimum Clearance for RO Filtration Unit (Applicable only to Bestware Unit)

RO filtration unit (optional)


Unit
(mm)

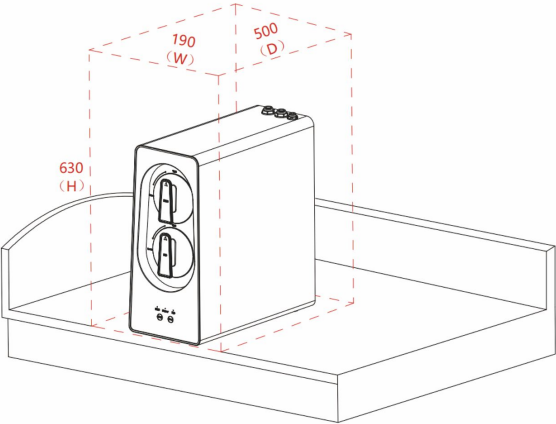

RO Filtration Unit Size
180 x 386 x 408 (W x D x H)


Water and Electrical Positioning Requirements

Unit
(mm)

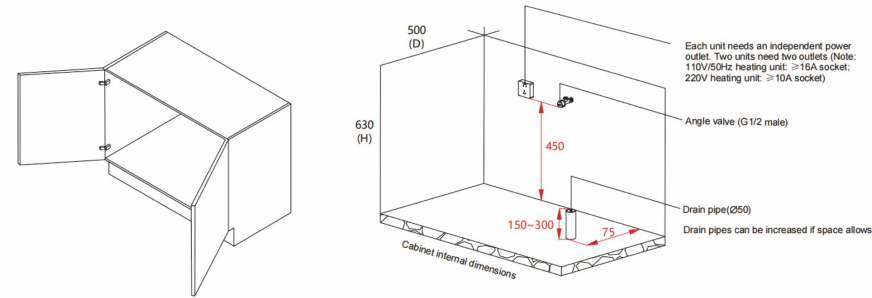


Countertop Cut-out Size

Before installing the dispenser tap, the countertop must be prepared with the required cut-out according to specifications.

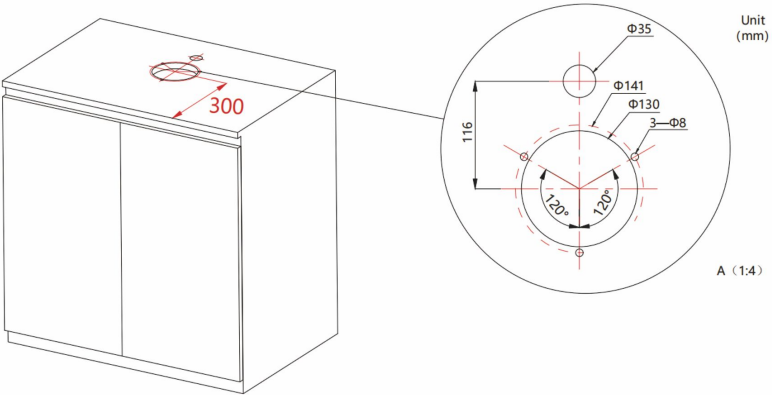


Dispenser Tap Installation Steps


1. Secure Drip Tray: Install the drip tray on the countertop. Secure the nut underneath the countertop first, then tighten it further using the mounting sleeve. (Maximum countertop thickness for drip tray installation: 36mm)

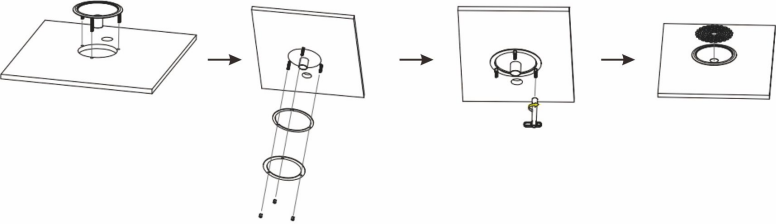

2. Secure Dispenser Tap: Install dispenser tap on countertop. First, fasten mounting nut underneath countertop, then tighten using Phillips screwdriver. (Maximum countertop thickness for dispenser tap installation: 40mm)


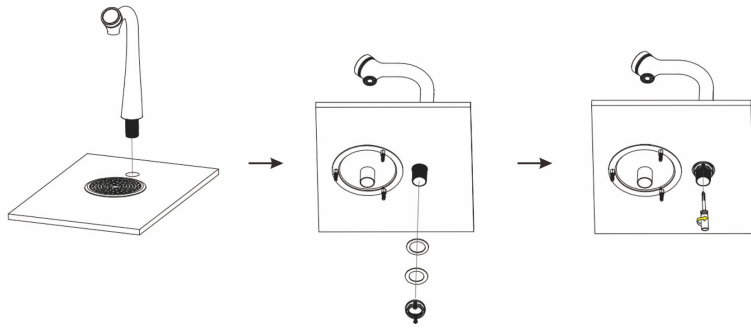


3. Install Telescopic Drain Hose: Connect the drip tray and the drain pipe using the telescopic drain hose.

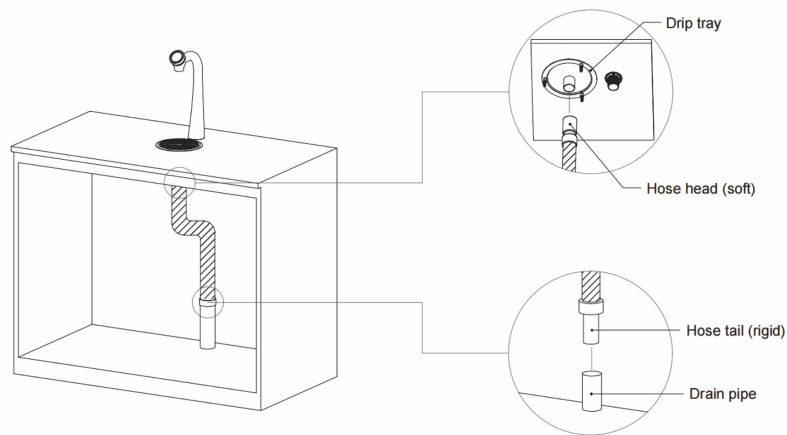

Tubing Connection Precautions


1. Take care to install correctly. No kinks, sags, pinches or loops.
2. The tubes and pipes must not be under tension when installed.
3. PE tubes must be trimmed to avoid loops and kinks. Take care when positioning before cutting and make a clean cut straight across the hose, using a sharp blade.

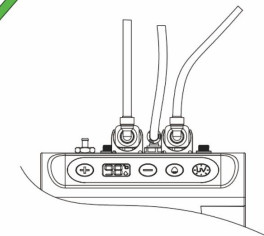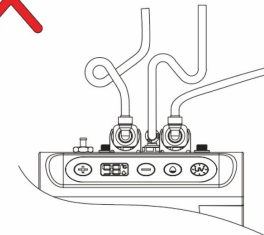

4. Follow the diagram and steps for proper PE tube handling.




 Insert



1. Cut tube clean and square.
2. Push tube firmly to end stop.

 
Remove



1. Press collet down.
2. Pull tube out.


Communication Cable Connection Precautions

1. When connecting the communication cable, make sure the connectors are properly aligned.

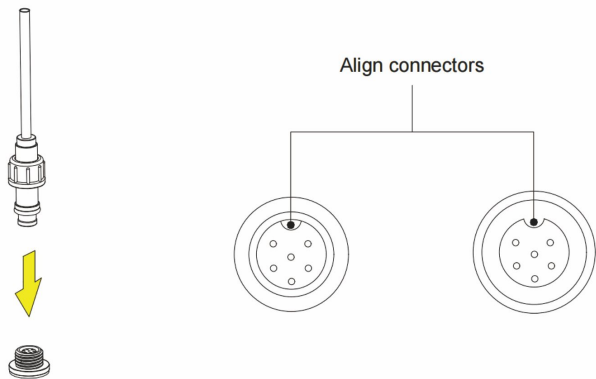


Power-on Precautions

1. Do not connect the power supply before installation is complete to prevent unit malfunction.

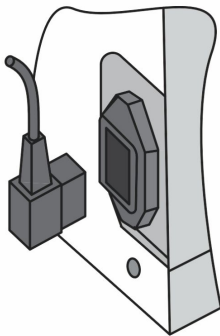


UV Sterilization Module

1. Pay attention to the arrow direction on the UV sterilization module during assembly.

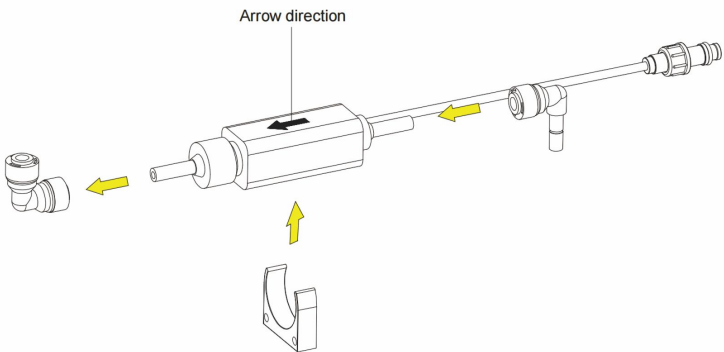


2. After assembling the UV sterilization module, secure it with the tube clip.

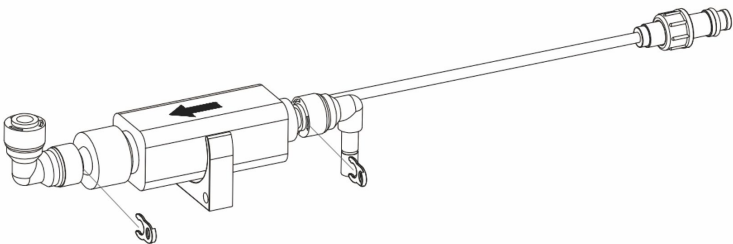


RO Filtration Unit Wastewater Drain Tube Precautions

1. The wastewater drain tube must be securely fixed to the drain pipe to prevent it from popping out due to internal pressure.

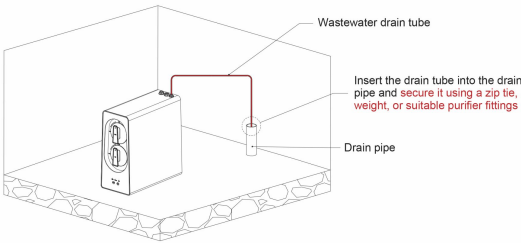


Safety Valve Drain Hose Precautions

1. The safety valve drain hose must be secured to the drain pipe.

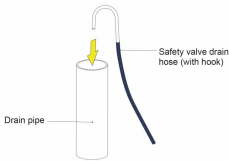


Connection Diagram

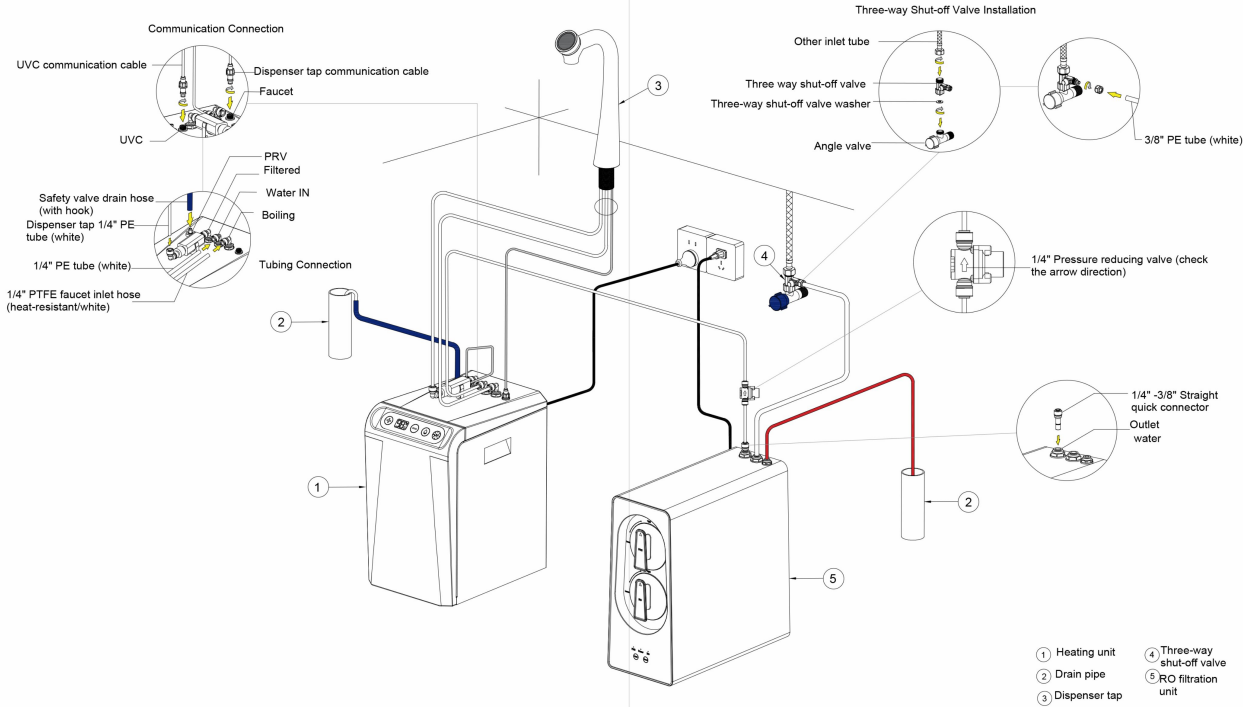


Post-installation Precautions

1. Check that all communication cables, water lines, and PE tubes are correctly connected. After confirming everything is secure, make sure all tube-to-fitting connections are locked in place with tube clips.

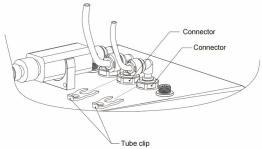


Pre-startup Precautions

1. Water Supply: Open the angle valve first, then open the three-way shut-off valve to supply water.

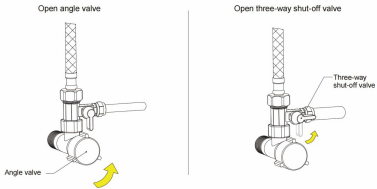

2. Power On Units: After confirming there are no leaks in the piping, turn on the power switches of the heating unit.

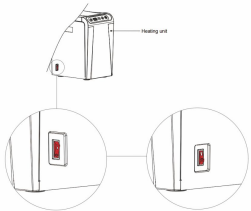

Warranty & Disclaimer

Warranty

Coverage: Full Unit Warranty (applicable only to the original purchaser — B2B customers only; non-transferable)
Scope: Dispenser Tap, Heating Unit
Period: 18 months from the date of purchase

Important Notice: This product must be connected to filtered water only (recommended TDS value below 50)

The following conditions are not covered under warranty:

- ① Yellowish water caused by sediment, sand, or impurities in the water source
- ② Malfunctions or irregularities caused by clogged impurities in the water source
- ③ No water output or reduced heating performance due to limescale
- ④ Malfunctions or irregularities in the heating unit caused by limescale
- ⑤ Any other operational issues or malfunctions resulting from limescale buildup
- ⑥ Operational issues or malfunctions caused by unauthorized adjustment of the 1/4" pressure reducing valve

Disclaimer

1. Damage caused by human error or misuse:

- ① Physical damage from collisions, drops, or crushing during transportation or installation
- ② Malfunctions due to unauthorized modifications or the use of non-original parts
- ③ Improper installation or use not in accordance with the instruction manual
- ④ Damage caused by abnormal voltage (e.g., voltage instability) or improper power supply (e.g., no grounding)
- ⑤ Malfunctions due to unsuitable environmental conditions (e.g., excessively high/low temperatures, high humidity, direct sunlight exposure, poor ventilation)
- ⑥ Clogging or damage caused by poor water quality
- ⑦ Malfunctions caused by liquid or foreign objects entering non-designated internal areas of the product
- ⑧ Damage caused by insects, rodents, or pets
- ⑨ Corrosion, discoloration, or deformation caused by improper cleaning (e.g., using strong acids or alkalis)

2. Force Majeure Events:

- ① Natural disasters such as fire, flooding (including water damage from burst pipes), earthquakes, lightning strikes, typhoons, etc.
- ② Accidental events such as damage caused by transportation, war, riots, theft, or government actions
- ③ Interruptions or abnormalities in public utilities, including power, water, and gas supply, resulting in indirect loss or equipment malfunction

3. Damage to Appearance Components or Normal Wear and Tear:

- ① Natural aging of plastic parts or worn labels that do not affect the product's functionality are generally not covered under warranty
- ② Minor scratches, dents, or discoloration occurring during transportation or use that do not affect functionality are typically not covered
- ③ Reasonable performance changes over time—such as slight increases in operating noise—are considered normal wear and are not covered by the warranty as long as they remain within acceptable limits.

4. Expired Warranty Period:

Warranty services are only provided within the specified valid period

5. Failure to Provide Valid Proof of Purchase:

- ① Inability to present a valid purchase invoice, receipt, or record to confirm the date of purchase
- ② The product serial number label is torn, altered, or illegible (this is generally considered grounds for disqualification from warranty coverage)

6. Unauthorized Repairs:

During the warranty period, any repair conducted by an unauthorized party or performed without official approval from the brand may void the warranty

Warranty Service Procedure

1. How to Request Service:

- ① Customer Service Hotline: +86 750 3108801 (Weekdays, 8:30-17:30)
- ② after-sales@bestware-stainless.com
- ③ Contact your sales representative

2. Required Documentation:

Please provide a valid original purchase invoice, electronic order, purchase record, or purchase contract

Special Notes

- ① Out-of-Warranty Repairs: A fee will be charged, including the cost of parts and a service fee (Standard rate: ____ CNY/visit)
- ② Extended Warranty: Additional warranty coverage of ____ years is available for purchase (please consult your sales representative for details)
- ③ Policy Updates: Brand policies are subject to change. Please refer to the latest official announcements on our website

Important Recommendations:

- ① Please review the warranty disclaimers carefully before purchase, and read the user manual thoroughly to ensure proper product usage
- ② Keep your proof of purchase safely during the warranty period

Right of Interpretation:

The company reserves the final right of interpretation for the warranty terms and disclaimer scope

[illegible]