



BESTWARE Hardware Production Co., Ltd.

Add: Block 8, No.6, Jianda Nan Road, Jiangmen, Guangdong, China

Website: www.bestware-stainless.com

Email: business@bestware-stainless.com after-sales@bestware-stainless.com

WhatsApp: +86 18929047065 Tel: +86 750 3108801

Wechat: +86 18929047065



Website



YouTube



WhatsApp



Wechat

2026 V1.0



Manual Bottle Filler User and Installation Manual



BLTFL-PB



BLTFL-CH






BLTFLM-PB






BLTFL-LH

PREMIER SOLUTION PROVIDER OF ONE-STOP STAINLESS COMMERCIAL FAUCETS


1.Function Overview

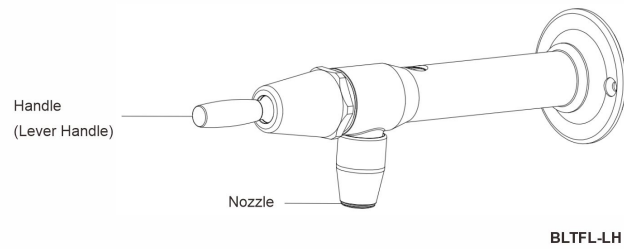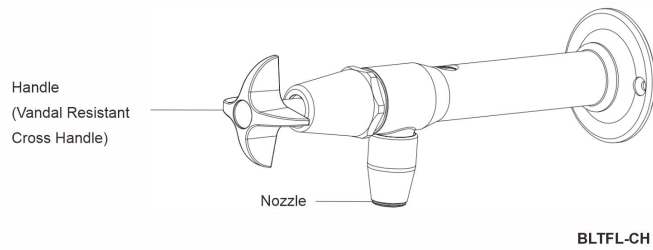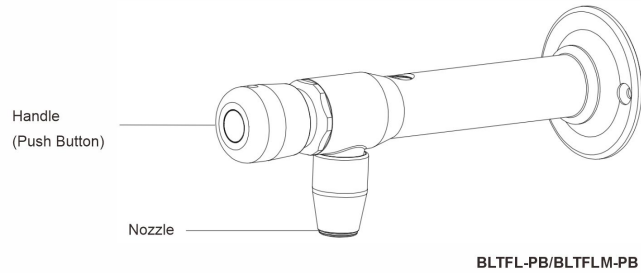

2.Operating Instructions

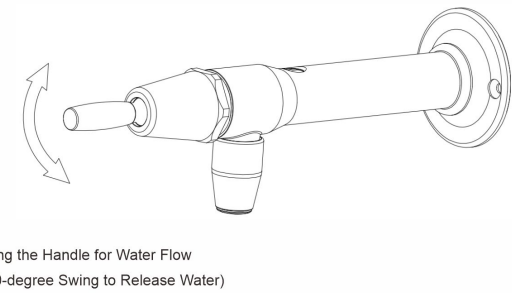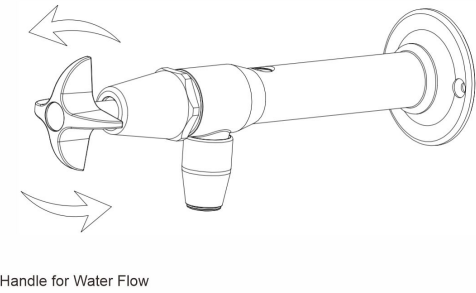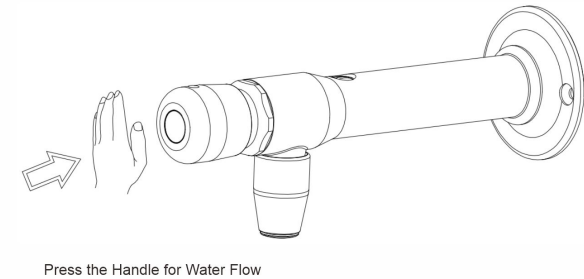

3. Adjust the Water Flow Rate: Use a flathead screwdriver to loosen the valve cap, then turn the adjustment rod while the faucet is running.

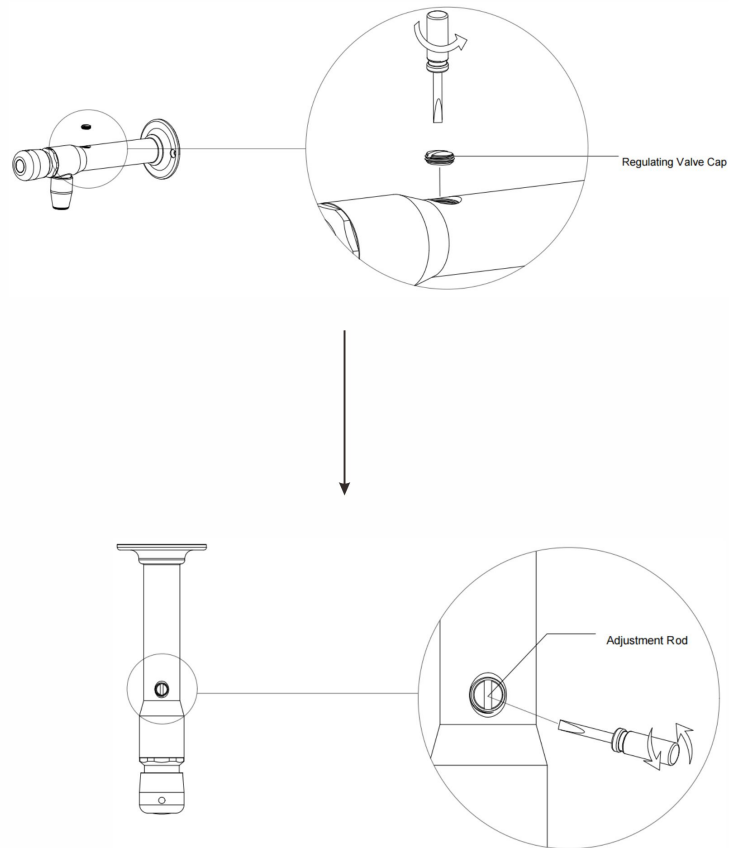

4. Operating Instructions (Wall Mount)

- After making the mounting hole in the wall, insert the screw plug into the hole. Wrap the PTFE tape around the wall-mounted threaded pipe, then connect the faucet to the pipe. Use the wrench to tighten the connection, and then use the screwdriver to tighten the screws.

