



BESTWARE Hardware Production Co., Ltd.

Add: Block 8, No.6, Jianda Nan Road, Jiangmen, Guangdong, China

Website: www.bestware-stainless.com

Email: business@bestware-stainless.com after-sales@bestware-stainless.com

WhatsApp: +86 18929047065 Tel: +86 750 3108801

Wechat: +86 18929047065



Website



YouTube



WhatsApp



Wechat

2026 V1.0



Affordable Luxury Lite Standard Style Pre Rinse Faucet (with Add-on Swing Nozzle)

User and Installation Manual




BQH112



BQW112


PREMIER SOLUTION PROVIDER OF ONE-STOP STAINLESS COMMERCIAL FAUCETS

1.Function Overview

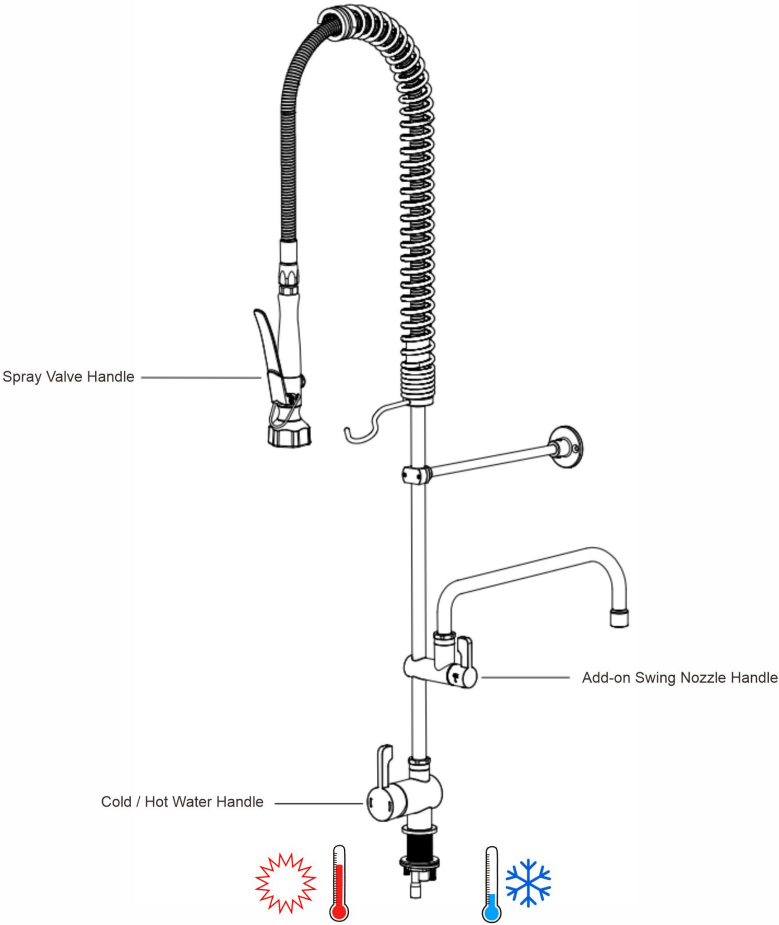


2.Operating Instructions


- 1 Turn on the water control on the main unit. Adjust the handle position and setting to control the flow rate and water temperature.

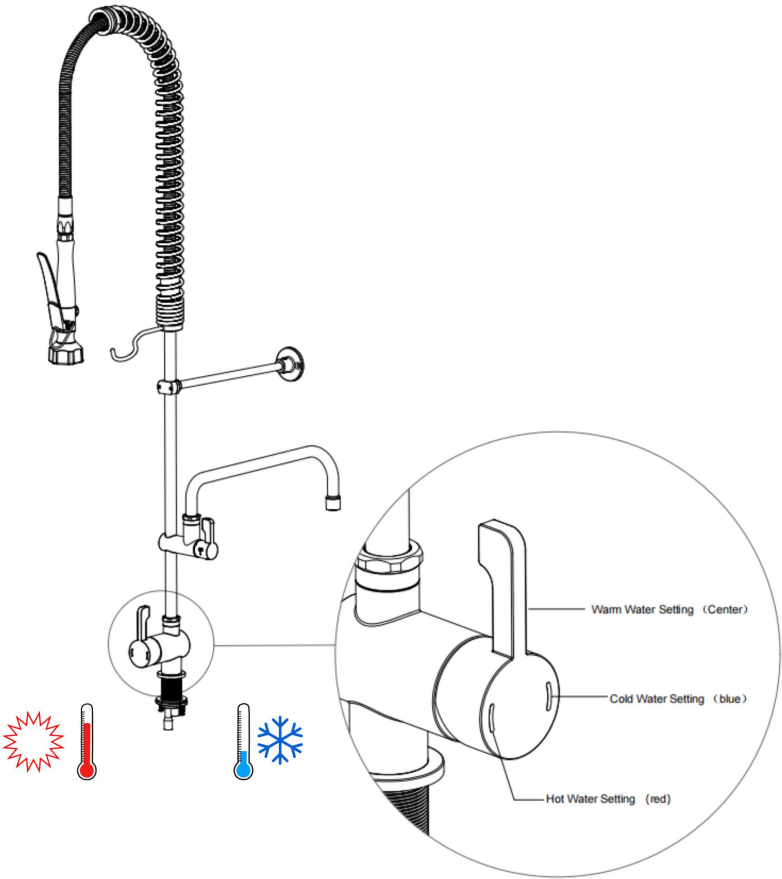


- ② Use the Spray Valve for Rinsing: Press the handle for water flow. Lock the handle with the hold down ring for continuous flow.

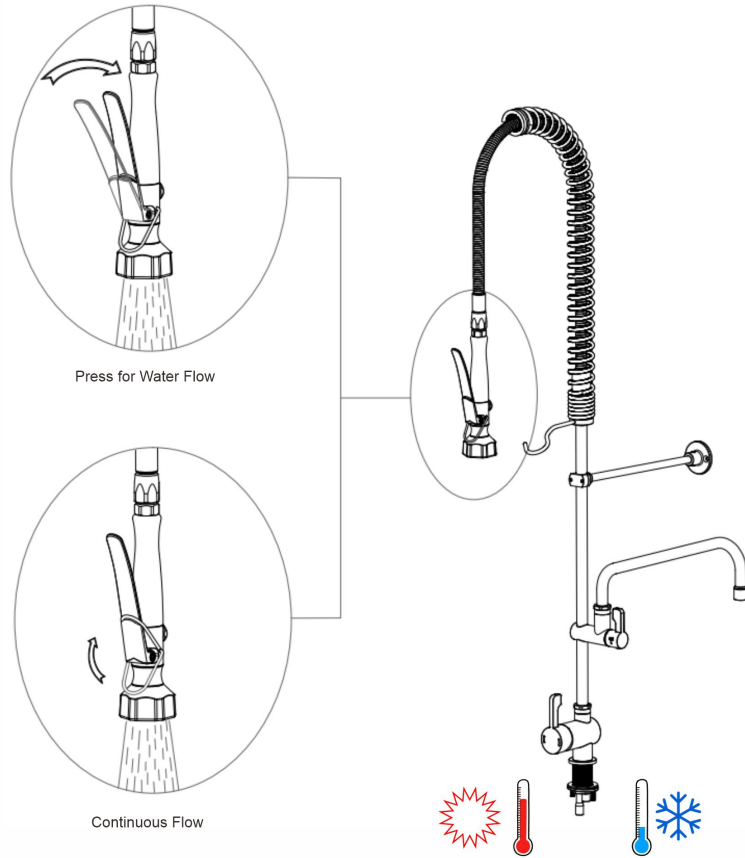


- ③ Switch Flow Modes: Rotate the spray valve head to change the flow mode.

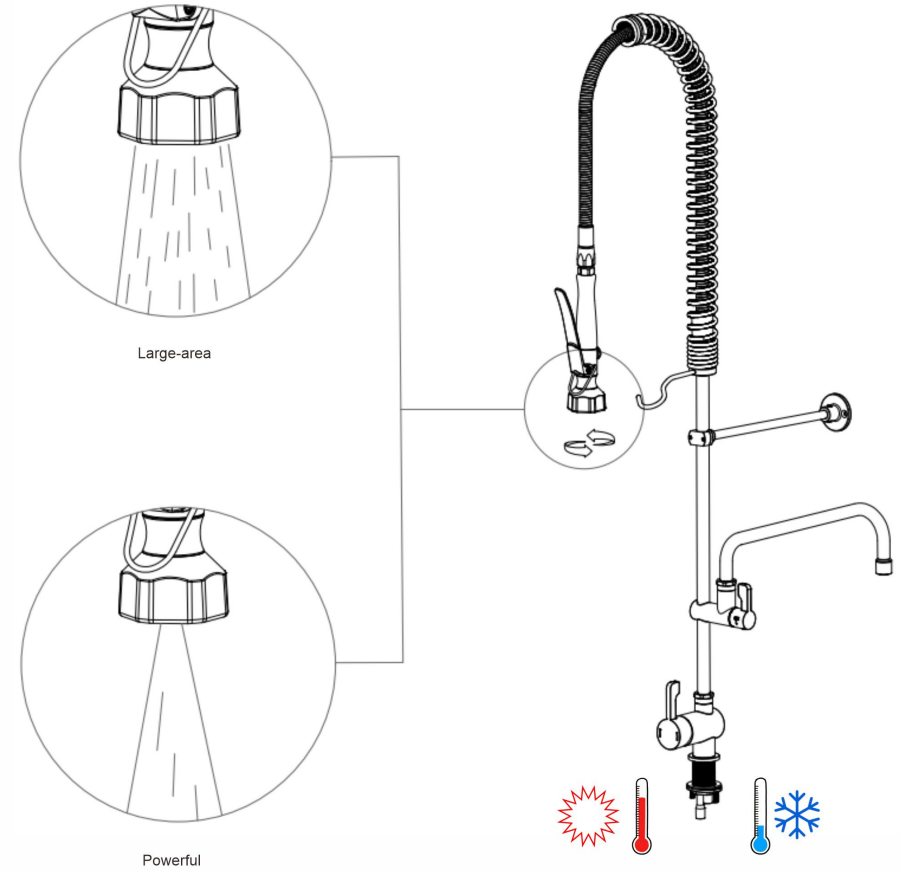


- 4 Move the spray valve left or right to control the swing range.

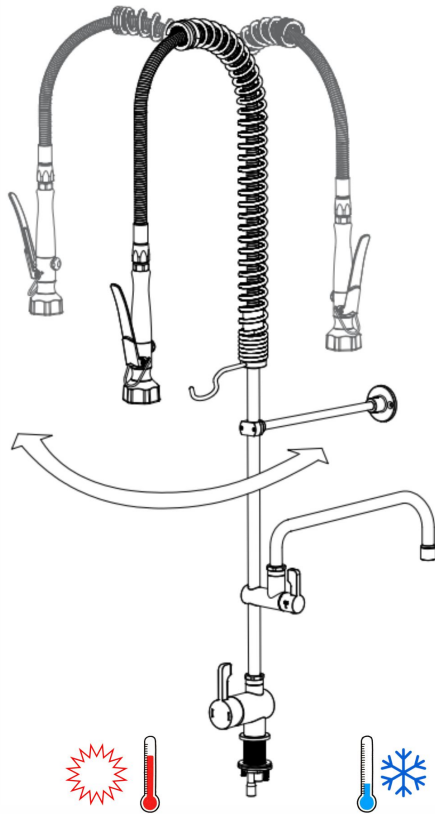


- 5 The add-on swing nozzle handle allows you to adjust the water flow of the swing nozzle.

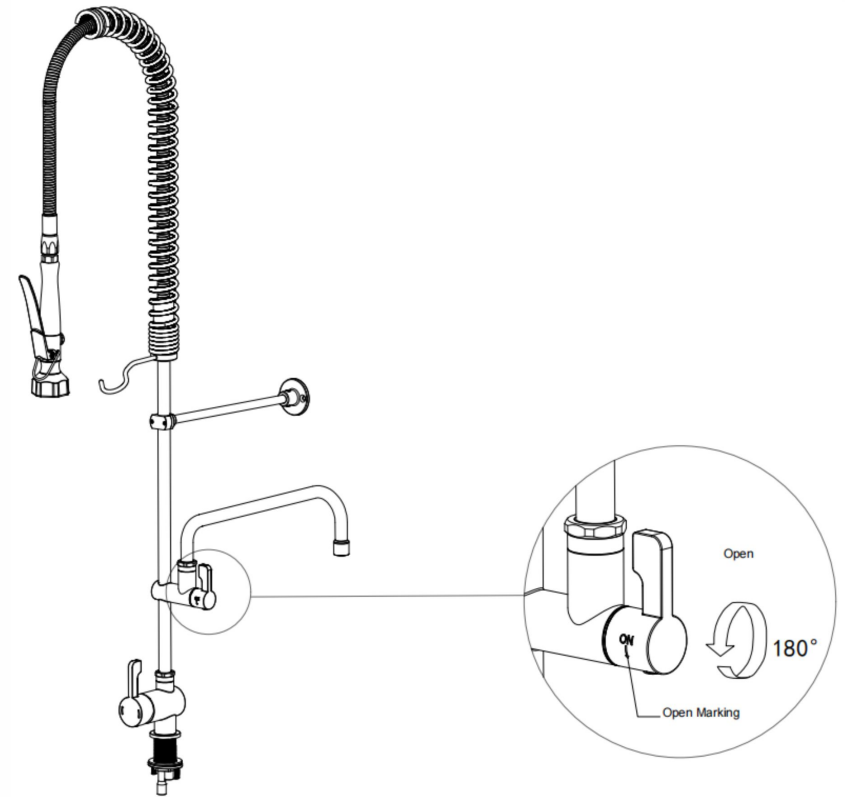


⑥ Move the add-on swing nozzle to adjust the water coverage range.

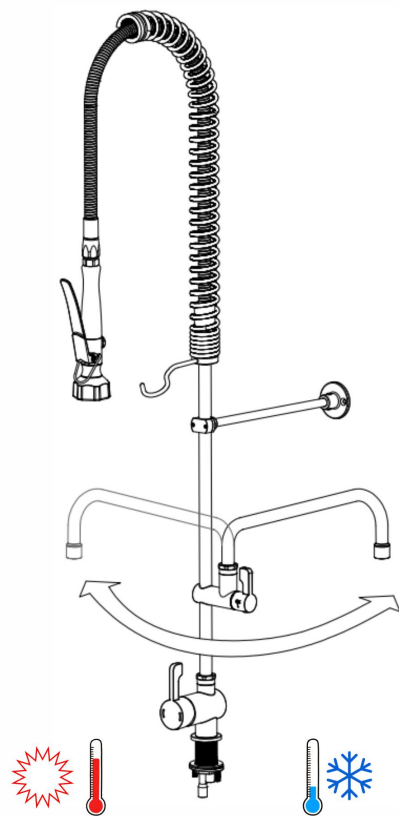

3.Product Structure

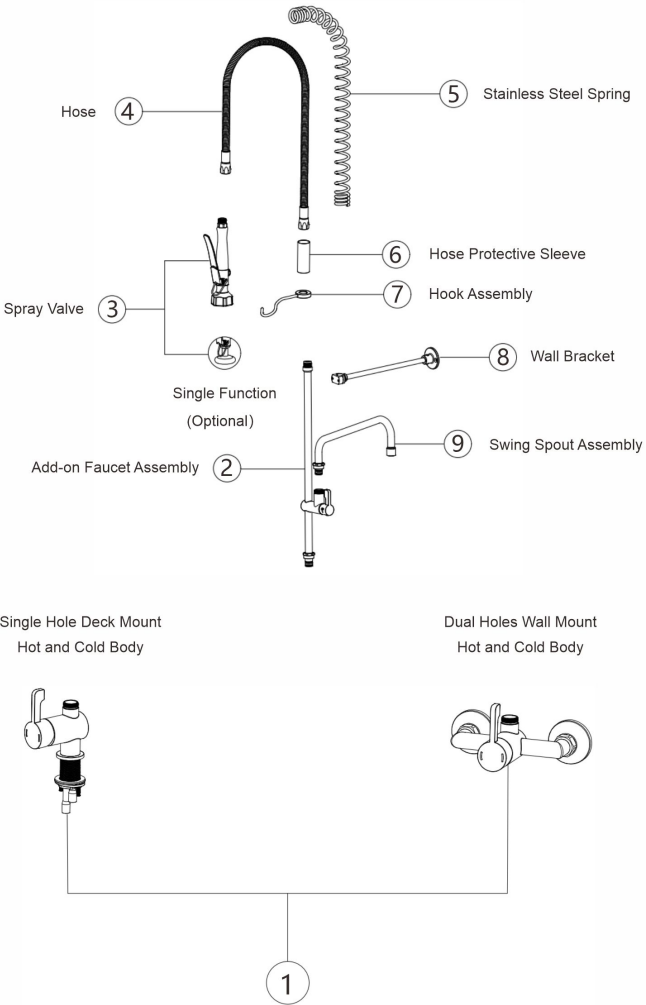

4.Assembly Components

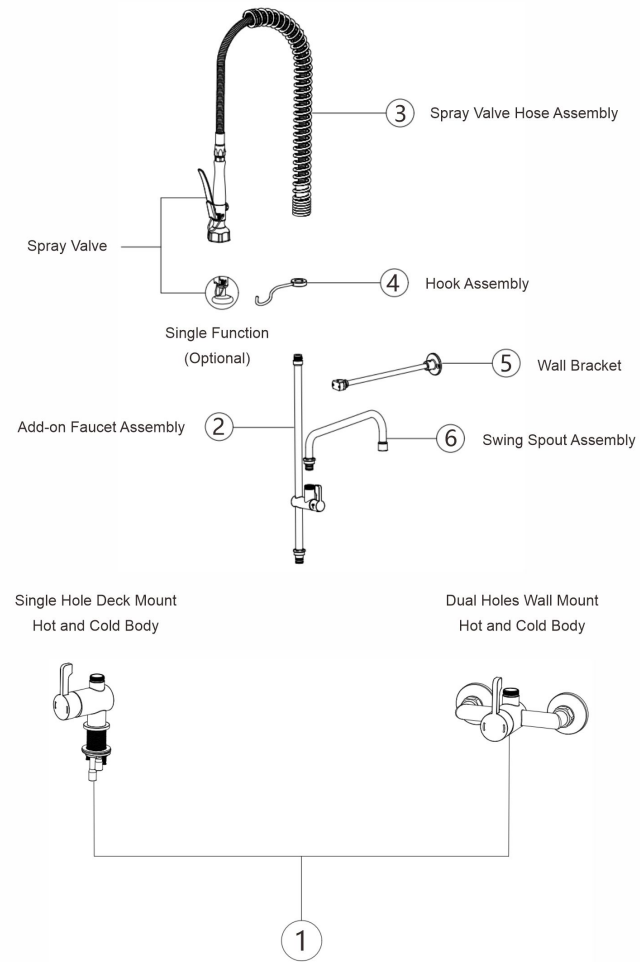


5.Tools Required




6.Installation Procedure


1. Faucet Body Installation: Drill the mounting hole according to the dimensions of the body assembly.

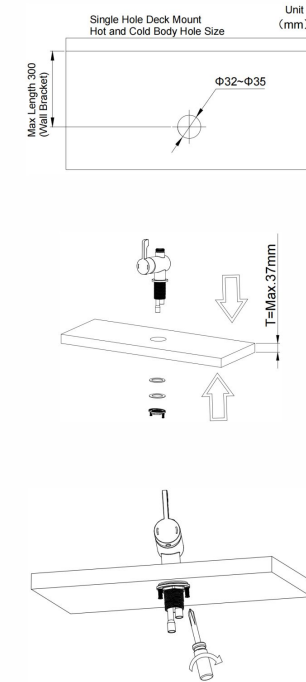


Dual Holes Wall Mount Hot and Cold Body Installation Procedure

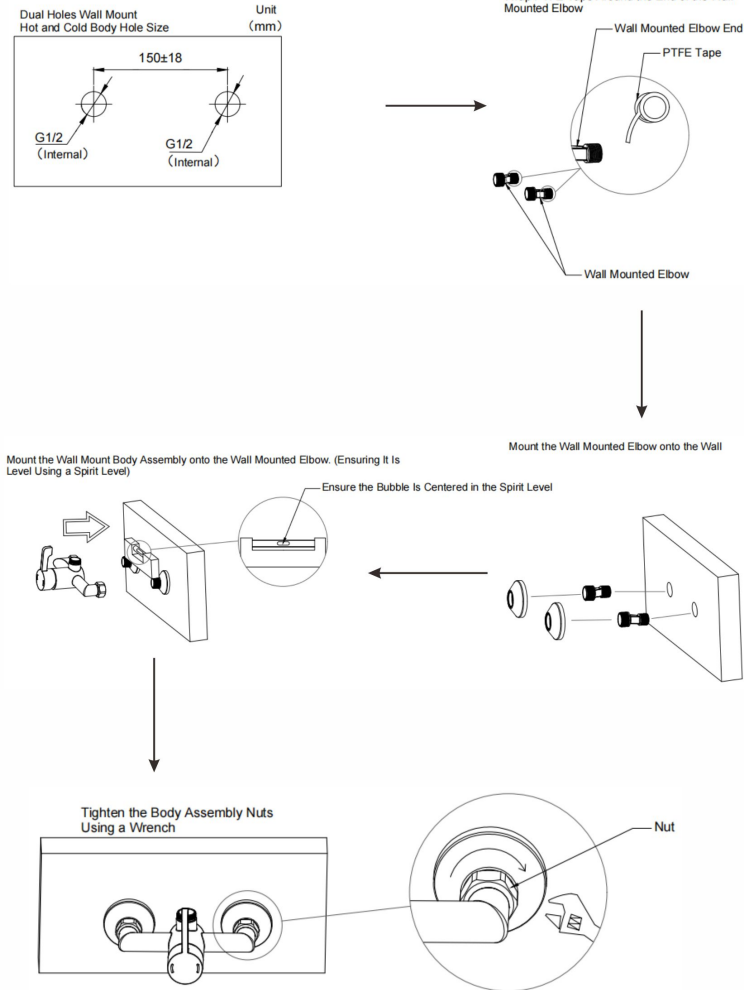


- 2 Wall Bracket Installation: Install the pre-assembled riser assembly and measure the required distance from the center of the riser to the wall. Cut the wall bracket rod to the appropriate length, install the base and secure the in-wall screws, insert the rod back into the base, and tighten the screws.

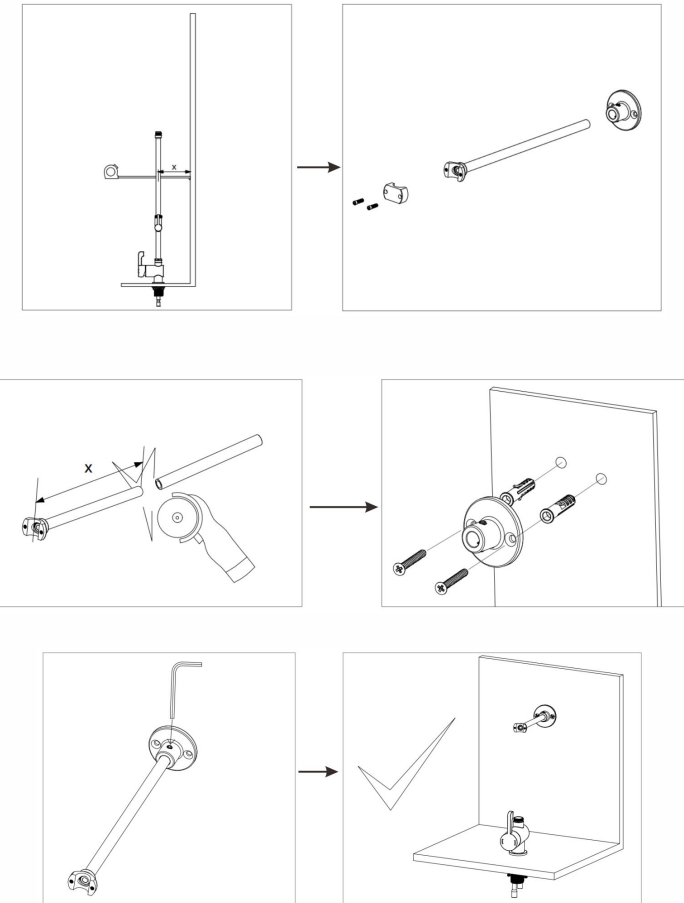


- 3 Install Add-on Faucet Assembly: Insert the add-on faucet assembly into the body and tighten the nut with a wrench.

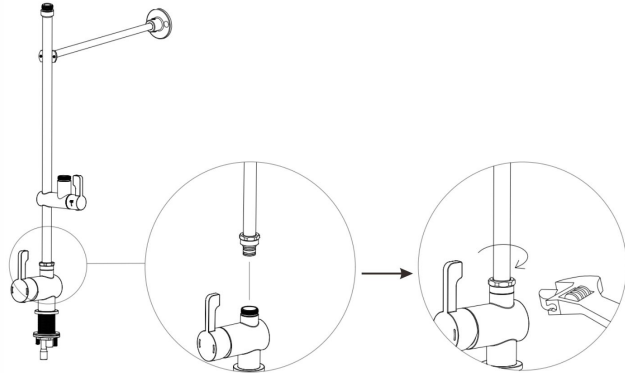


- 4 Install the Wall Bracket Secure the Riser: Install the wall bracket assembly and tighten the screws to secure them in place.

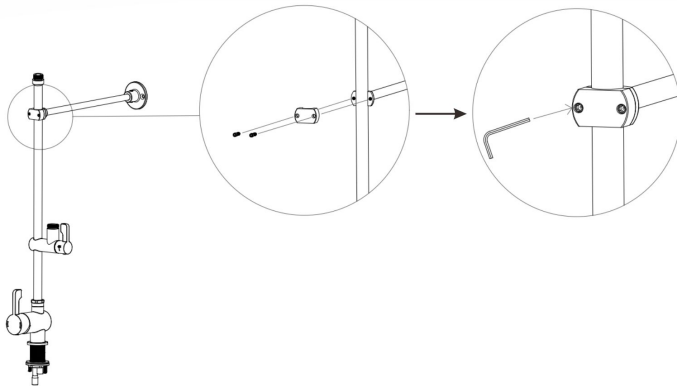


- 5 Install the Hook Assembly: Adjust the hook to the proper angle and tighten the screws.

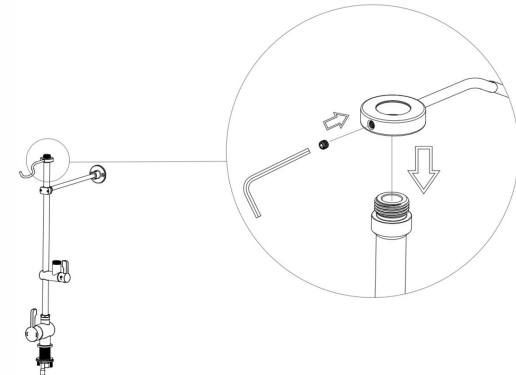


- 6 Prepare the spray valve hose assembly before installation.

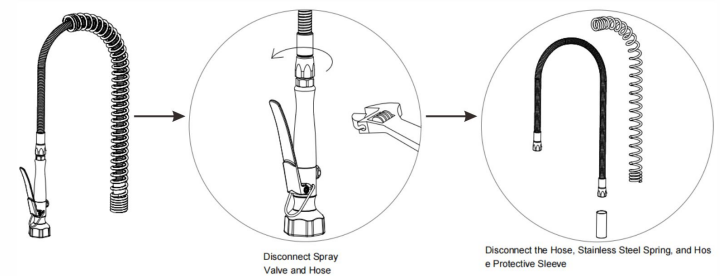

- 7 Install the spray valve hose assembly.

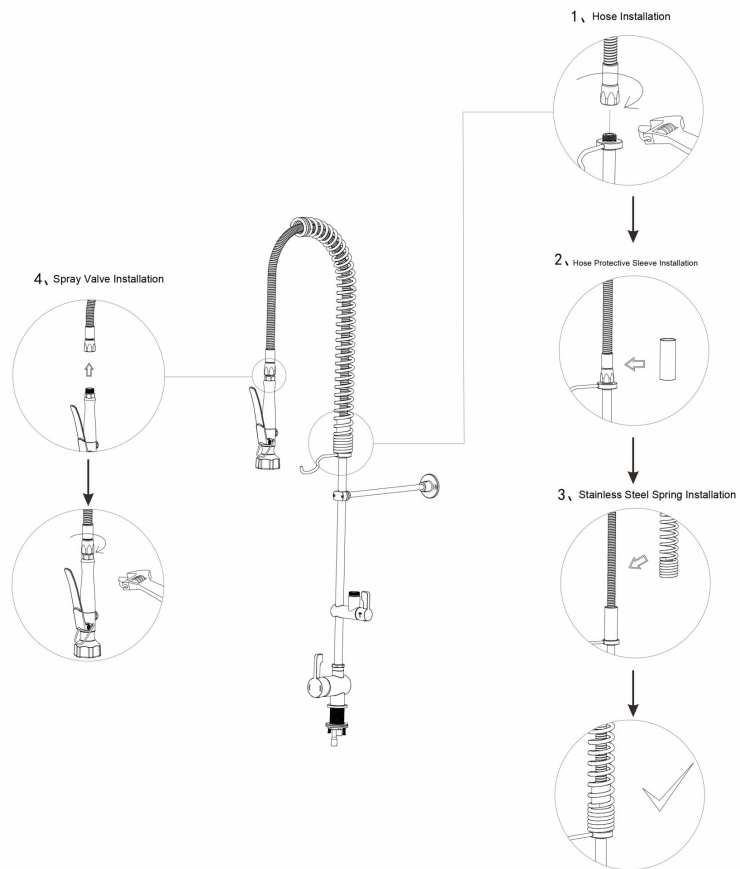

- 8 Swing Spout Assembly: Connect the swing spout assembly to the add-on faucet assembly and tighten the nut securely with a wrench.

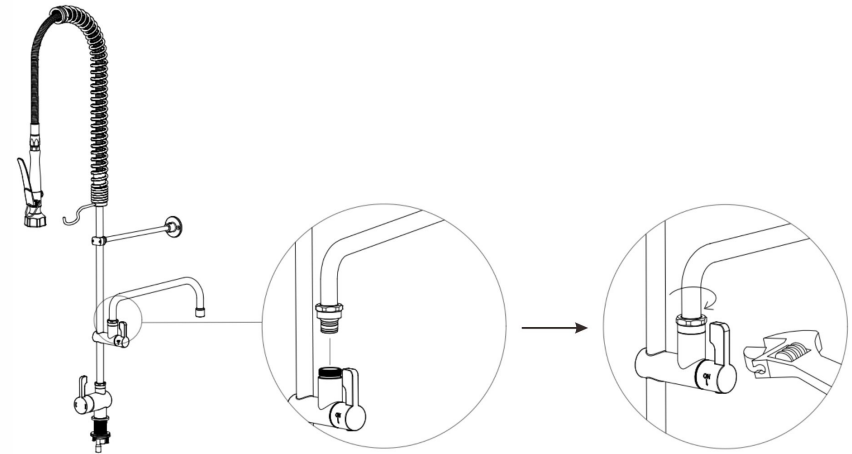

- 9 Connect the Hot and Cold Inlet Tubes: Connect the hot water tube to the left and the cold water tube to the right, then tighten with a wrench. Open the angle valves and turn on the hot and cold handles to check for any leaks in the tubing. Press the spray valve to run water and switch between spray modes to ensure proper functionality.

